

360° Panoramic Camera

Wi-Fi · 1-inch Screen · 360° Panoramic Video/Photo



Made in China



Panoramic
Video



Dual Screen



1" Screen



VR Video



VR Video

THE BASICS



Micro USB Port

ACCESSORIES



Tripod



USB Cable



Charger



2.4G Remote

MOUNTING YOUR CAMERA

Attach your camera to the tripod.



GETTING STARTED

HELLO

Congratulations on your new 360° Panoramic Camera! This user manual will help you learn the basics of capturing life's most incredible moments!

To power ON:

 
Press and hold the **Power/Mode Button** for **3 seconds**.

To power OFF:

Press and hold the **Power/Mode Button** for **3 seconds**.

OVERVIEW

Turn camera ON and repeatedly press the **Power/Mode Button** to cycle through camera modes and settings. The modes will appear in following order:



960P30

Record 960p30 video



2.7K25

Record 2.7K25 video



4K15*

Record 4K15 video



Photo

Capture a 4M photo


360° PANORAMIC VIDEO RESOLUTION

360° Video Resolution:

960p30 / 2.7K25 / 4K15

MicroSD Card	960p30	2.7k25	4k15
32 GB	300 mins	60 mins	60 mins

360° PANORAMIC VIDEO MODE

 960p30 / 2.7K25 / 4K15

To record **360° Video**, verify the camera is in **Video mode**. If the **Video** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To start recording:

Press the **Shutter/Select Button**. The camera will emit one beep.

To stop recording:

Press the **Shutter/Select Button**. The camera emits one beep to indicate recording has stopped.

This camera automatically stops recording when the battery is out of power. Your **Video** will be saved before the camera powers **OFF**.

360° PANORAMIC PHOTO MODE

 4M Photo

To capture a **360° Photo**, verify the camera is in **Photo mode**. If the **Photo** icon on your camera's LCD screen is not showing, press the **Power/Mode Button** repeatedly until it appears.

To take a photo:

Press the **Shutter/Select Button**. The camera will emit the camera shutter sound.

BATTERY

To charge the battery

Use the **1.5A USB charger** and **USB cable** that come standard with your camera.

*Charging Time: 4 hours.

*Third-party chargers and accessories may **NOT** be supported.

MICROSD CARD CONSIDERATIONS

This camera is compatible with **32GB** capacity **microSDXC** memory cards. Be sure to use a **microSDXC** card with at least a **U3 (90MB/s)** speed rating. We strongly recommend only purchasing name brand cards through official resellers. The cards below are known to work well with this camera.

Card Name and Manufacturer Part Number:



SanDisk Extreme microSDHC U3 32GB
(SDSQXNE-032G-ZN6MA)



SanDisk Extreme PRO microSDHC U3 32GB
(SDSDQXP-032G-Z46A)



Transcend Ultimate 633x microSDHC U3 32GB
(TS32GUSDU3)



Lexar 633x microSDHC U1 32GB
(LSDMI32GBBNL633R)

HOW TO FORMAT MICROSD CARD

Be sure to format your card using the **CAMERA APP Ez iCam** before first use.

1. Open the Ez iCam App on your phone.
2. Go to **SETTINGS** in the top right corner.
3. Press "Format".
4. Format card? All data will be lost.
Press "Confirm".

CAMERA APP

Connecting to the Ez iCam App (Android not supported at the moment)

The **Ez iCam App** lets you control your camera remotely using your iPhone. Features include full camera control, live preview, playback and sharing of select content and more.

1. Download the **Ez iCam App** to your iPhone at the **Apple App Store**.
2. Press the **Power/Mode Button** to power camera **ON**.
3. Press the **Wi-Fi Button** to turn on **Wi-Fi***.
4. In your iPhone's Wi-Fi settings, connect to the network called "**ICAM-Pano360**" followed by a series of numbers.
5. Open the **Ez iCam App** on your iPhone.
6. Press "Connect" using the **Ez iCam App**.

* Press and hold the **Wi-Fi Button** for three seconds to turn **OFF Wi-Fi**.

The **Ez iCam App** is compatible with smartphones listed below.

For Apple iOS

* iPhone 6/6s/7 (Plus)(iOS10)



iOS App Download

COMPATIBILITY

* Compatibility varies by device. Content playback, sharing and access to the camera's memory card might be not available on some devices.


VIDEO PLAYER FOR COMPUTERS

Recommended 360 Video & Photo player for computers
Kolor: www.kolor.com/kolor-eyes

HARD RESET YOUR CAMERA

** Press and hold the **Power/Mode Button** for **10 seconds**.

USER INTERFACE OF APP

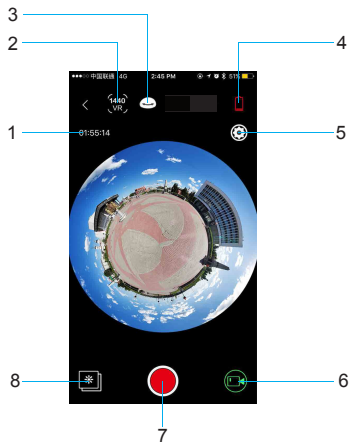

1	Available recording time	2	Video resolution
3	360° Mode switch	4	Battery
5	Settings	6	Video/Photo switch
7	Record/Stop button	8	Album
			Video Photo

360° Mode switch:

	Panorama		Ring
	Sphere		Outer Ring
	Outer Sphere		VR Headset

2.4G REMOTE



Photo Button

Video Button

*Splashproof

360° Video

To record **360° Video**, verify the camera is in **Video** or **Photo** mode.

To start recording:

Press the **Grey Video Button**. The camera will emit three beeps and start recording.

To stop recording:

Press the **Grey Video Button**. The camera will stop recording.

360° 4M Photo

To capture a **360° Photo**, verify the camera is in **Video** or **Photo** mode

*To power OFF camera:

Press and hold the **Red Photo Button**.