User Manual



ELRO CC60RIP11S HD IP surveillance camera with real white light for colour nightview



HD Wi-Fi Camera with LED Light Table of contents

(1)	What's in the box?	03
(2)	Camera Overview	04
(3)	iOS Device Operation	05
	Getting Start	05
	Internet Connection	06
	Direct Connection	08
	App icons/ buttons function and description	11
	Advanced Setting	13
	Notice	15
(4)	Android Device Operation	19
	Getting Start	19
	Getting Start	19 20
	Getting Start Internet Connection Direct Connection	19 20 22
	Getting Start Internet Connection Direct Connection App icons/ buttons function and description	19 20 22 25
	Getting Start Internet Connection Direct Connection App icons/ buttons function and description Advanced Setting	20 22 25 27
	Getting Start Internet Connection Direct Connection App icons/ buttons function and description Advanced Setting Notice	19 20 22 25 27 29
(5)	Getting Start Internet Connection Direct Connection App icons/ buttons function and description Advanced Setting Notice Specification	19 20 22 25 27 29 29

What's in the box?



Screws & Anchors

User Manual

Check your package to confirm that you have received the complete system.

Camera Overview



iOS Device Operation

Getting Start

1. Go to App store to download and install **ELRO Color Night Vision IP Cam** APP on your iPhone or iPad (support iOS7 or above).



2. Install and set up the camera

- 1) Carefully unpack the camera
- 2) Attach power adapters to the cameras. Plug into power

Once power on ELRO CC60RIP11S, the power LED will start with solid green, after 10 seconds it turns off, about 15 seconds later, it will change to fast flash, means initialization finished.

3. There are two options to connect the camera with cell phone: internet connection and direct connection

3.1 Internet Connection

1) Make sure your smart phone or tablet is connected to the same local WiFi network (which the camera is using) and the power LED of the camera is in fast flash mode.

No SIM 🗢	10:24	∦ 20% 💽 ≁
Settings	Wi-Fi	
Wi-Fi		
🗸 rdi9		₽ ╤ (j
CHOOSE A NETW	/ORK	
rdi_5g		₽ ╤ (j)
rdi8		₽ 🗢 (j)
rdi8_5g		🔒 🗢 i
rdi9_5g		₽ ╤ ()
Other		
Ask to Join Ne	etworks	\bigcirc
Known networks	will be joined a	utomatically. If

2) Enter the APP, press"+" to add camera, and go to smart config





3) Input the local network password on the pop-up, then input camera password (default 000000) on next pop-up, touch "save" to complete the connection



Notice: At the first time you add a camera, to make the camera password more secure, you need to change the password. Reset the new password (8-16 alphanumeric characters), and "**Save**" your password.



3.2 Direct connection

1) Press the "reset" button on the camera, the power LED will stay on.

Remark: Once power on ELRO CC60RIP11S, the power LED will start with solid green, after 10 seconds it turns off, about 15 seconds later, it will change to fast flash, means initialize finished.

2) Go to "setting" on your cell-phone to search the camera Wi-Fi, and connect to the camera Wi-Fi.



3) Enter the APP, and touch "+" to add the camera.



4) There are three ways to complete direct connection: search in local network, QR code scan, manual input.



A: Search in Local network

Touch "Search in local network", it will automatically search the camera DID, then touch the selected camera and get the camera name and DID, input the camera password (default 000000) and press "Save" to complete the connection.



B. QR code scan

Touch **QR code scan**, and scan the QR code attached on the back of the camera, then get the camera name and DID, input the camera password (**default 000000**) and save the password.

No SIM 🗢	10:30 🕴 23% 💽 +
🕻 Input Camer	a Password
Camera Name	HomeView Pro-0
DID	RDITST0005-RQ
Password	•••••
	Save
	\sim

C. Manual input

Touch **Manual input**, and get the camera name, input the DID attached on the back of the camera and camera password (**default 000000**), then save the password.



When the power LED in "stay on" mode, press and hold the camera reset button for more than 5 seconds will change camera to factory default mode, power LED will then be in fast flash mode.



4 In Live View

While the connection is completed, you can see the live video on the phone.

4.1 App Icons / buttons function and description



1 snapshot icon 💽 : Take snapshot of the image you are watching. The picture will be saved automatically to your photo albums.

- 2 View icon : Check the snapshots you took.
- 3 Talk-back icon = : Activate the two-way communication function.

4 Event list E: Playback the recorded files. The recorded videos can to be searched by time. Choose the period and search.



: Tap this button to download the event, and the file will be kept in "PHOTO "folder. The downloaded mp4 document will be changed into MOV format Video if you download in your computer.

£-24 MH		140 31
	1	Event List
21	(f)	2016-05-20 07:18:21
	Ð	2016-05-20 07:17:04
	G	2016-05-20 06:38:51
	O	2016-05-20 01:23:41
	Φ	2016-05-19 07:19:43
	Φ	2016-05-19 07:19:00
	(l)	2016-05-19 03:21:06
	Φ	2016-05-19 03:19:05
	(l)	2016-05-19 03:17:04
	Φ	2016-05-19 03:15:03
	Φ	2016-05-19 03:13:36
	and	2016-05-18 07:24:56
	0 // l	2016-05-18 07:24:21
	0	2016-05-18 07:14:19
	Φ	2016-05-18 07:12:51
		2016-05-18 04:02:10
	Φ	2016-05-17 22:15:13
	()	2016-05-17 20:57:18
	()	2016-05-17 13:40:07
	0	2016-05-17 07:58:27
		2016-05-17 07:57:22

- 5 Manual Recording button : Tap to activate manual recording, tap again to stop manual recording.(manual recording lasts 2 minutes every time, however, automatic record only lasts 15 seconds per trigger).
- 6 Light icon

; Turn on/ off the LED light.

7 Advanced Setting button . Enter Advanced Setting menu.

4.2 Advanced Setting

1) Video Rotation: the camera can be placed on a flat surface, wall or ceiling, you may need to adjust the video rotation to get a better angle.

●●●●● 中国联通 令 10:46 AM	17% 💽	No SIM 奈 10:44 参 29% 🍽 チ
🕻 Advanced Settings	ତ	\checkmark Advanced Settings \checkmark
Motion Detection		SD Card Management
Push Notification	\bigcirc	
File Overwrite	\bigcirc	Video Rotation Normal
SD Card Management	>	
		Time Zone
Video Rotation		
\checkmark		Previous Next Done
Time Zone	>	
WLAN Networks	>	
		Normal Sci
		Flip Horizontally
Liaht Settinas	>	Flip Vertically
Save		180 Degree

2) WLAN Networks: when your Smartphone and camera are in direct connection, you can use WLAN network to choose a local router for the WF692, and change the camera to internet mode.

Touch **WLAN Networks** and select the local network, input your local Wi-Fi password. Press "Save" to complete setting.



While the camera is connected to the router and **power LED in slow flash mode**, you will be able to use any Wi-Fi or GSM signal to see the video from the app.



3) Light Setting: you can set duration of the camera light (off, 1 minute, 3 minutes, 10 minutes), Dimmer (25%, 50%, 75%, 100%) and Timer(the time for light on or off, repeat) as per your preference.

No SIM ক 11:25 🗙 Light Settings	* 50% ••• + V
Duration	1 minute
Dimmer	100%
Timer	>
Save	

5. Notice

1 You can enter the advanced setting by tapping the icon on the right of the connected camera. Submenus will show up, and choose the "More". You can adjust the advanced setting part.



2 Once the advanced setting is completed, please remember to press "Save"and "OK" to preserve the setting.

No SIM रू 11:27	* 51% ••• + ••	No SIM 奈 ✔ Advai	11:28 nced Settings	+ ۵۱% کې ک
DID RDITST0005-R0	Q2QGRG9TM	DID	RDITST0005-RQ2	2QGRG9TM
Firmware Version	V 1.13.0	Firmware	e Version	V 1.13.0
Library Version	1.0.0.0	Library \	/ersion	1.0.0.0
Camera Firmware Upgra	ade >	C Save	ed Settings Succe	essfully
			OK CC	
Motion Detection	Off	Motion E	Detection	Off
Push Notification		Push No	tification	
File Overwrite	\bigcirc	File Over	write	\bigcirc
SD Card Management	>	SD Card	Management	>
Save	in		Save	

- 3 Default Wi-Fi Camera: press " reset" button of the camera for more than 5 seconds and then release, the power LED will flash quickly. The default setting completes.
- 4 If the camera lost connection, please press the screen and pull down, it will automatically reconnect (refresh).

Android Device Operation

Getting Start

1. Go to Googleplay to download and install ELRO Color Night Vision IP Cam APP to your Android phone or tablet (support Android 4.1 or above).



2 Install and set up the camera

- 1) Carefully unpack the camera
- 2) Connect to a local power outlet using the included power adapter.

Once power on ELRO CC60RIP11S, the power LED will start with solid green, after 10 seconds it turns off, about 15 seconds later, it will change to fast flash, means initialization finished.

3 There are two options to connect the camera with cell-phone: internet connection and direct connection.

3.1 Internet Connection

1) Make sure your smartphone or tablet is connected to the same local network (which the camera is using, non-5G) and the power LED of the camera is in fast flash mode.



2) Enter the APP, press"+" to add camera, and touch smart config



Add New (Camera		≎ ▼⊿ ≗	15:37
Search in Local	Network			>
QR Code Scan				>
Manual Input				>
Smart Config	an			>
	\triangleleft	0		

3) Input the local network password on the pop-up, then input camera password (default 000000) on next pop-up, save the password to complete connection



Notice: At the first time you add a camera, to make the camera password more secure, you need to change the password. Reset the new password (8-16 alphanumeric characters), and touch "**Save**".



3.2 Direct connection

1) Press the "reset" button on the camera, the power LED will light up continuously.

Remark: Once power on ELRO CC60RIP11S, the power LED will start with solid green, after 10 seconds it turns off, about 15 seconds later, it will change to fast flash, means initialization finished.

- 2) Press "setting" button of your device to search the camera Wi-Fi, and connect to camera Wi-Fi
- 3) Enter the APP, and touch "+" to add the camera.



4) There are three ways to complete direct connection: search in local network, QR code scan, manual input.



a. Search in Local network

Tap "Search in local network", it will automatically search the camera, then touch the selected camera and get the camera name and DID, input the camera password (default 000000) and press "Save" to complete the connection.



b. QR code scan

Tap **QR code scan**, and scan the QR code attached on the back of the camera, then get the camera name and DID, input the camera password (default 000000) and touch "**Save**" to complete the connection.



c. Manual input

Tap **Manual input**, and get the camera name, input the DID attached on the back of the camera and camera password (**default 000000**), then press "**Save**" to complete the connection.



Remark: When the power LED in "stay on" mode, press and hold the camera reset button for more than 5 seconds will change camera to factory default mode, power LED will then be in fast flash mode.



4 In Live View

While the connection is completed, you can see the live video on the phone.

4.1 App Icons/ buttons function and description



1 snapshot icon 💽 : Take snapshot of the image you are watching. The picture will be saved automatically to your photo albums.

2 View icon : Check the snapshots you took.

3 Talk-back icon 👕 : Activate the two-way communication function.

4 Event list E: Playback the recorded files. (8GB micro SD card included) The recorded videos can to be searched by time. Choose the period and search.



: Tap this button to download the event, and the file will be kept in "PHOTO "folder. The downloaded mp4 document will be changed into MOV format Video if you download in your computer.

eVer Lut Image: Control of	SM T	2:38 AM	33% 📼 +	
016-06-20 07:18:21 01 2 016-06-20 07:18:21 01 2 016-06-20 00:38:51 01 2 016-06-20 00:38:51 01 2 016-06-20 00:38:51 01 2 016-06-20 00:38:51 01 2 016-06-19 00:11:43 01 2 016-06-19 00:21:00 01 2 016-06-19 00:21:00 01 2 016-06-19 00:11:36 01 2 016-06-19 00:11:36 01 2 016-06-18 00:24:21 01 2 016-06-18 00:24:21 01 2 016-06-18 00:24:21 01 2 016-06-18 00:24:21 01 2 016-06-18 00:24:21 01 2 016-06-18 00:24:21 01 2 016-06-18 00:14:19 01 2 016-06-18 00:14:19 01 2 016-06-19 00:11:36 01 2 016-06-19 00:11:36 01 2 016-06-19 00:11:36 01 2 016-06-19 00:11:36 01 2	Event List		· ·	< E/
Code Construct Code Construct Code Code Construct Code Code Code Code Code Code Code Code	6-05-20 07-19-21		0	2016.4
1 1	016-05-20 07:17:04		6	2016-05-1
0100000000000000000000000000000000000	2016-05-20 06:38:51		(t) (t)	2016-05-20 (
And Control Another and Another another another another and Another anoothere and Another and Anot	2016-05-20 01:23:41		6	2016-05-20 01:
Control Control <t< td=""><td>016-05-19 07:19:43</td><td></td><td>0</td><td>2016-05-19 07:19</td></t<>	016-05-19 07:19:43		0	2016-05-19 07:19
16-05-10032106 1 2016-05-1003210 16-05-10032106 1 2016-05-1003210 16-05-10031005 1 2016-05-1003100 16-05-10031005 1 2016-05-1003100 16-05-10031005 1 2016-05-1003100 16-05-10031306 1 2016-05-10031305 16-05-10031336 1 2016-05-10031336 16-05-10031336 1 2016-05-10031336 16-05-10031336 1 2016-05-10031336 16-05-10031336 1 2016-05-10031336 16-05-10031336 1 2016-05-1003136 16-05-10031336 1 2016-05-1003136 16-05-10031336 1 2016-05-1003136 16-05-10031336 1 2016-05-1003136 16-05-10071251 1 2016-05-1003132 16-05-10071251 1 2016-05-1003132 16-05-1702451 1 2016-05-107242 16-05-1702451 1 2016-05-107242 16-05-1702451 1 2016-05-17032 16-05-17030001 1 2016-05-1703542 </td <td>16-05-19 07:19:00</td> <td></td> <td>0</td> <td>2016-05-19 07:19:0</td>	16-05-19 07:19:00		0	2016-05-19 07:19:0
6-05-19 0319 05 D 2016-05-19 0316 00 6-05-19 0319 05 D 2016-05-19 0316 00 6-05-19 0317 04 D 2016-05-19 0316 00 6-05-19 0317 04 D 2016-05-19 03117 00 6-05-19 0315 03 D 2016-05-19 03113 01 6-05-18 072451 D 2016-05-18 072421 6-05-18 072451 D 2016-05-18 072422 6-05-18 071251 D 2016-05-18 071251 6-05-17 02151 D 2016-05-18 071251 6-05-17 221513 D 2016-05-18 071251 6-05-17 221513 D 2016-05-18 071251 6-05-17 0215718 D 2016-05-17 0215718 6-05-17 0215718 D 2016-05-17 0215718 6-05-17 075782 D 2016-05-17 1340.007 6-05-17 0757823 D 2016-05-17 075723	6-05-19 03:21:06		0	2016-05-19 03:21:0
16-05-19 0317.04 10 16-05-19 0317.04 10 16-05-19 0317.04 10 16-05-19 0317.04 10 16-05-19 0317.04 10 16-05-19 0317.05 10 16-05-19 0317.05 10 16-05-19 0317.04 10 16-05-18 07.24.55 10 16-05-18 07.24.51 10 16-05-18 07.24.21 10 16-05-18 07.14.19 10 16-05-18 07.12.51 10 16-05-17 02.57.18 10 16-05-17 02.57.18 10 16-05-17 07.55.27 10 16-05-17 07.55.27 10 16-05-17 07.57.23 10	16-05-19 03:19:05		<u> </u>	2016-05-19 03:19:05
16-05-19 03:15:03 2016-05-19 03:15:03 16-05-19 03:15:03 2016-05-19 03:15:03 16-05-19 03:15:03 2016-05-19 03:13:26 16-05-18 07:24:50 2016-05-18 07:24:50 16-05-18 07:24:21 2016-05-18 07:24:21 16-05-18 07:12:51 2016-05-18 07:12:51 16-05-17 02:15:13 4 16-05-17 02:57:18 4 16-05-17 02:57:18 4 16-05-17 07:55:27 4 16-05-17 07:57:23 4	16-05-19 03:17:04		<u>0</u>	2016-05-19 03:17:04
h6-06-19 03:13:36 2016-06-19 03:13:36 h6-06-18 07:24:56 2016-05-18 07:24:56 h6-06-18 07:24:21 4 h8-06-18 07:12:51 4 h8-06-18 07:12:51 4 h8-06-17 07:56-27 4 h8-06-17 07:56-27 4 h8-06-17 07:56-27 5	016-05-19 03:15:03		0	2016-05-19 03:15:03
16-05-18 07:24:56 0 16-05-18 07:24:56 0 16-05-18 07:24:21 0 16-05-18 07:24:21 0 16-05-18 07:12:51 0 16-05-18 07:12:51 0 16-05-18 07:12:51 0 16-05-18 07:12:51 0 16-05-18 07:12:51 0 16-05-18 07:12:51 0 16-05-18 07:12:51 0 16-05-17 07:15:13 0 16-05-17 07:57:18 0 16-05-17 07:55:27 0 16-05-17 07:57:23 0	16-05-19 03:13:36		0	2016-05-19 03:13:36
+05-18 07:24:21 Image: Content of the content of th	-05-18 07:24:56		and	2016-05-18 07:24:56
8-05-18 07:14:19 2018-05-18 07:14:19 8-05-18 07:12:51 2018-05-18 07:12:51 8-05-18 04:02:10 2018-05-18 04:02:10 8-05-18 04:02:10 2018-05-18 04:02:10 8-05-17 02:15:13 2018-05-17 02:15:13 8-05-17 22:15:13 2018-05-17 22:15:13 8-05-17 22:057:18 2018-05-17 20:57:18 8-05-17 13:40:07 2018-05-17 13:40:07 8-05-17 07:58:27 2018-05-17 07:58:27 8-05-17 07:57:23 2018-05-17 07:57:23	6-05-18 07:24:21		0 %	2016-05-18 07:24:21
8-05-18 07:12:51 Ch 2016-05-18 07:12:51 8-05-18 04:02:10 Ch 2016-05-18 04:02:10 8-05-17 02:15:13 Ch 2016-05-18 04:02:10 8-05-17 22:15:13 Ch 2016-05-17 22:15:13 8-05-17 20:57:18 Ch 2016-05-17 20:57:18 8-05-17 13:40:07 Ch 2016-05-17 13:40:07 8-05-17 07:58:27 Ch 2016-05-17 07:58:27 8-05-17 07:57:23 Ch 2016-05-17 07:57:23	6-05-18 07:14:19			2016-05-18 07:14:19
05-18 010 2016-05-18 04:02:10 05-17 0216-05-18 010 2016-05-17 2215:13 05-17 0216-05-17 0216-05-17 2016-05-17 2016-05-17 2016-05-17 2016-05-17 2016-05-17 2016-05-17 13:40:07 05:17 05:17 07:55:27 010 2016-05-17 07:55:27 05:17 07:57:23 010 2016-05-17 07:57:23 010 2016-05-17 07:57:23 010 2016-05-17 07:57:23 010 2016-05-17 07:57:23 010 2016-05-17 011 <td< td=""><td>05-18 07:12:51</td><td></td><td>\$</td><td>2016-05-18 07:12:51</td></td<>	05-18 07:12:51		\$	2016-05-18 07:12:51
Image: Description of the section	3-05-18 04:02:10		G	2016-05-18 04:02:10
5-56-17 20:57:18 Ch 2016-05-17 20:57:18 5-56-17 13:40:07 Ch 2016-05-17 13:40:07 5-56-17 07:58:27 Ch 2016-05-17 07:58:27 5-56-17 07:57:23 Ch 2016-05-17 07:57:23	8-05-17 22:15:13		€)	2016-05-17 22:15:13
116-05-17 13-40:07 2016-05-17 13-40:07 116-05-17 07 2016-05-17 07 116-05-17 07 2016-05-17 07 116-05-17 07 2016-05-17 07	16-05-17 20:57:18		(L)	2016-05-17 20:57:18
016-05-17 07:58:27 Cp 2016-05-17 07:58:27 016-05-17 07:57:23 Cp 2016-05-17 07:57:23	016-05-17 13:40:07		()	2016-05-17 13:40:07
6-05-17 07:57:23	6-05-17 07:58:27		()	2016-05-17 07:58:27
	i-05-17 07:57:23		(f)	2016-05-17 07:57:23

- 3 Manual Recording button : Tap to activate manual recording, tap again to stop manual recording.(manual recording lasts 2 minutes every time, however, automatic record only lasts 15 seconds per trigger).
- 6 Light icon : Turn on/ off the LED light.
- 7 Advanced Setting button . Enter Advanced Setting menu.

4.2 Advanced Setting

1) Event list: touch "Event list" to check the recording file, the recorded videos can be searched by time.

					No SIM 🕈	2:38 AM	33% 🔳
Kevent List	2:48 A	*		32%	Event List		
					2016-05-20 07:18:21		A
Period				Range	2016-05-20 07:17:04		G
From			May 23, 2016, 1	8:00 AM	2016-05-20 06:38:51		0
То			May 23, 2016,	2:43 AM	2016-05-20 01:23:41		· · · ·
					2010 05 20 012041		
	S	ear	a		2016-05-19 07:19:43		ф
		2	$\langle \rangle$		2016-05-19 07:19:00		(L) (L)
			~~~~		2016-05-19 03:21:06		(L) (L)
					2016-05-19 03:19:05		<b>A</b>
					2016-05-19 03:17:04		Ð
					2016-05-19 03:15:03		Ð
					2016-05-19 03:13:36		Ð
					2016-05-18 07:24:56		Ð
					2016-05-18 07:24:21		Ð
					2016-05-18 07:14:19		Ð
					2016-05-18 07:12:51		Ð
Previous Next				Done	2016-05-18 04:02:10		Ð
C 🗗					2016-05-17 22:15:13		Ð
					2016-05-17 20:57:18		<b>A</b>
Sat May 2	1 6	58			2016-05-17 13:40:07		0
Sun May 2	N S	00	AN4		2010 05 17 07-50-07		
Tue May 2	4 9	01	PM		2010-05-1/ 0/:58:2/		ф
Wed May 2	5 10	02			2016-05-17 07:57:23		(†)

 Video Rotation: the camera can be placed on a flat surface, wall or ceiling mounting, you may need to set the video rotation (Normal, Flip Horizontally, Flip Vertically, 180 degree) for better video angle. 3) WLAN Networks: when your Smartphone and camera are in direct connection, you can use WLAN network to choose a local router for the WF692, and change the camera to internet mode.

Touch **WLAN Networks** and select the local network, input your local Wi-Fi password. Press "Save" to complete setting.

🗨 🗊 🜵 🗭 🌧 📰 🕬 🕯 🔜 WLAN Networks	ត្ 📶 🚡 21:09	🕂 🚺 🖞 🇭 🌧 📰 🗿	💐 🚡 📶 🖪 21:09	🕂 🚺 🖞 🗭 🌧 🔜	s 21:10
📶 RDI WIFI	>	📶 RDI WIFI	>	📶 RDI WIFI	>
SYD1	>	reisco	Connected	📕 cisco	
🚽 cisco	Connected	rdi8		rdi8	>
rdi8	>	Security WPA2/AES Password	Cancel	Modify WLAI Success OK	N Network sfully

While the camera is connected to the router and power LED in slow flash mode, you will be able to use any Wi-Fi or GSM signal to see the video from the app.

●●●●○ 中国电信 🗢	11:55	7 0 73% 🔳
Settings	Wi-Fi	
Wi-Fi		
✓ rdi_5GHz		₽ ╤ (ì)
CHOOSE A NETV	VORK	
cisco		<b>₽ ╤ (j</b>
rdi8_5g		<b>₽ ╤ (j</b>
Other		
Ask to Join Ne	tworks	
Known networks If no known netw be asked before j	will be joine orks are ava joining a nev	d automatically. iilable, you will v network.
	•••••• 中国电信	•••••• 中国电信

4) Light Setting: you can set duration of the camera light (off, 1 minute, 3 minutes, 10 minutes), Dimmer (25%, 50%, 75%, 100%) and Timer( the time for light on or off, repeat) as per your preference.



#### 5. Notice

1 You can enter the advanced setting directly by touching the right icon of the connected camera, and choose more. Details as following pictures show.





2 Once the advanced setting is completed, please remember to press "Save"and "OK" to preserve the setting.



- 3 Default Wi-Fi Camera: press " reset" button of the camera for more than 5 seconds and then release, until the Power LED turn off. The default setting completes.
- 4 If the network is not stable, the camera will lost connection, please press and pull down the screen, the connection will refresh automatically.

## **Specification**

ltem	Specification	
Power supply	DC 9V ±5%	
Wi-Fi Frequency range	2.412GHZ-2.462GHZ(Channel 1-11)	
Wi-Fi Security	WPAPSK	
Wi-Fi Standard	IEEE 802.11b/g/n,1T1R	
Video Encode	H.264 VGA, 720P	
Image Sensor Type	OV9712 CMOS Image Sensor	
Wi-Fi transmitting power	11b:<18dBm 11g:<14dBm 11n:<13dBm	
Receive Sensitivity(typical)	<ul> <li>11M: <u>-86dBm@8%</u> (typical)</li> <li>54M: <u>-73dBm@10%</u> (typical)</li> <li>130M : <u>-66dBm@10%</u> (typical)</li> </ul>	
Transmission distance	80m line of sight	
Resolution	720P(1280 x 720).	
Speaker Output	Differential 80hm/0.5W	
Operating Temperature	-20°C ~ 60° (-4°F ~ 140°F)	

### **Camera Power LED Indication**

Once power on ELRO CC60RIP11S, the Power LED will start with solid green, after 10 seconds it turns off, about 15 seconds later, it will change to fast flash, means initialize finished.

Power LED	Camera condition	Remark
Fast flash	Camera in initial/default mode	Click the "reset" button, the power LED will change to solid green, camera works in direct mode
Slow flash (4seconds a flash)	Camera in internet mode (whatever the camera connected to router or not)	Click the "reset" button, the power LED will change to solid green, camera works in direct mode
Solid green	Camera in direct mode	Push and hold the "reset" for 5 seconds, camera will reset to factory default
Power LED off	<ol> <li>Power off</li> <li>Camera works abnormal, need to change camera to factory default and set up camera again</li> </ol>	<ol> <li>Ensure that on the premise of sufficient power supply,</li> <li>Most possible reason is input wrong password for the router when in set up process Click the reset button, then the power LED will change to solid green, wait for about 20 seconds, then push and hold reset button for 5 seconds, release and wait till power LED change to fast flash.</li> </ol>
Medium speed flash	Camera works abnormal, need to change camera to factory default and set up camera again	Most possible reason is input wrong password for the router when in set up process Click the reset button, then the power LED will change to solid green, wait for about 20 seconds, then push and hold reset button for 5 seconds, release and wait till power LED change to fast flash.

 At any condition, click "reset" button (power LED in solid green). Wait for 30 sec, then push and hold the "reset" button for 5 seconds, the camera will be in factory default (power LED in fast flash).